

7.2 Parameter setting using the keypad

7.2.1 Keypad

(Order no.: EMZ9371BB)

The keypad can also be plugged into the X1 interface and removed during operation. When the keypad is plugged into the controller, the module is initialized. The keypad is ready to operate after "GLOBAL DRIVE READY" has been displayed.

Front view

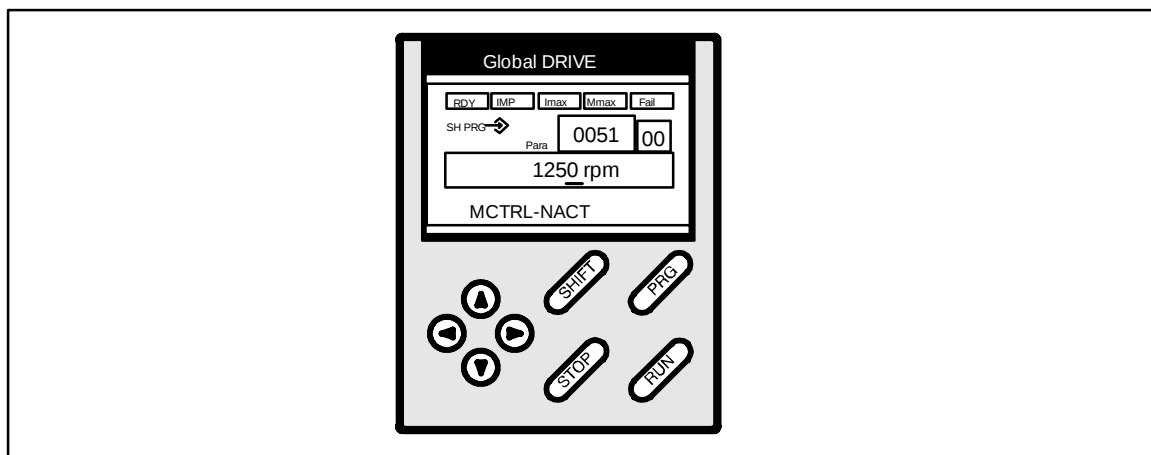


Fig. 7-1 Keypad

LCD display

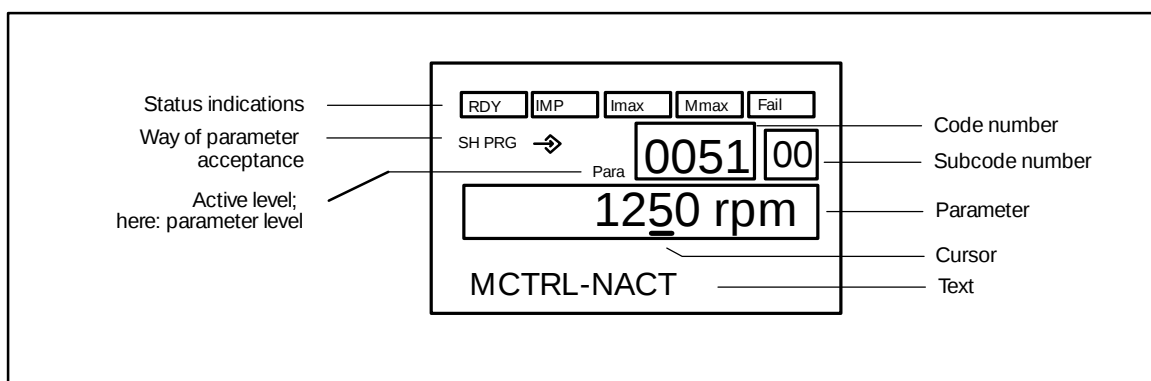


Fig. 7-2 LCD display of the keypad